

SERVICE PARTS LIST

THE M.G. Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>CABLES AND CONNECTIONS</b>										
1	Harness—main forward .....	AHH5825		1	1			AHH5952	] Com. (C) 2103		
2	Harness—chassis .....	AHH5444		1	1			AHH5953			
3	Harness—panel .....	AHH5445		1	1			AHH5970			
4	Harness—tail lamp .....	AHH5446		1	1			AHH5954			
5	Cable—coil to distributor .....	AHH5826		1	1						
6	Cable—positive battery to earth .....	AHH5448		1	1						
7	Cable—negative battery to starter switch .....	AHH5449		1	1						
8	Link—positive battery to negative .....	AHH5450		1	1						
9	Cable—starter switch to starter .....	AHH5814		1	1						
10	Cable—petrol pump to earth .....	ADH2611		1	1						
11	Nut for petrol pump to earth cable .....	FNZ104		1	1						
12	Washer for nut (spring) .....	LWZ204		1	1	12.					
13	Lead—flasher and headlamp—L.H. ....	37H5057		1	1			AHH5969	Com. (C) 2103		
14	Strip—engine to earth .....	AHH5452		1	1						
15	Clip—main harness to bulkhead .....	PCR1007		2	2						
16	Screw for clip .....	PMZ0310		2	2						
17	Nut for screw .....	FNZ103		2	2						
18	Washer for nut (spring) .....	LWZ203		2	2						
19	Clip—main harness to body bolt .....	PCR1011		1	1						
20	Clip—main harness to wing bolt .....	PCR0811		2	2						
21	Nut for wing bolt clip and earth wire .....	FNZ105		3	3						
22	Washer for nut (spring) .....	LWZ205		3	3	24.					
23	Clip—headlamp cable to front panel .....	PCR0607		3	3						
24	Screw for clip .....	PMZ0308		3	3						
25	Nut for screw .....	FNZ103		3	3						
26	Washer for nut (spring) .....	LWZ203		3	3						
27	Clip—dynamo cable to starter cable (rubber) .....	ACH8979		1	1						
28	Clip—negative cable to rear ramp screw .....	PCR0709		1	1						
29	Nut for screw .....	FNZ204		1	1						
30	Washer for nut (spring) .....	LWZ204		1	1	12.					
31	Clip—tail lamp harness to side-member .....	PCR0407		1	1						
32	Screw for clip .....	PMZ0306		2	2						
33	Nut for screw .....	FNZ103		2	2						
34	Washer for nut (spring) .....	LWZ203		2	2						
35	Clip—coil to L.H. wing valance .....	PCR0709		1	1						
36	Sleeve (rubber) .....	ACH8529		1	1						
37	Bolt for clip .....	HBZ0405		1	1						
38	Nut for bolt .....	FNZ104		1	1						
39	Washer for nut (spring) .....	LWZ204		1	1	12.					
40	Screw—battery earth cable .....	HZS0504		1	1						
41	Nut for screw .....	FNZ105		1	1						
42	Washer for nut (spring) .....	LWZ205		1	1	24.					