



A2074

SERVICE PARTS LIST

THE M.G. Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	SUMP—OIL LEVEL INDICATOR TUBE										
1	Sump—oil	AEH315	AE1	1	1						
2	Plug for sump—drain	2H4685	AE2	1	1						
3	Washer for plug (copper)	6K431	AE3	1	1						
4	Joint—sump to crankcase	1G2290	AE4	1	1	12					
5	Screw—sump to crankcase	HZS0407	AE5	19	19						
6	Washer for screw (plain)	PWZ104	AE6	19	19	12					
7	Washer for screw (spring)	LWZ204	AE7	19	19	12					
8	Tube—oil level indicator	AEH536	AE8	1	1						
	OIL PUMP—OIL RELEASE VALVE—OIL FEED PIPE										
9	Pump assembly—oil	1H1191		1	1						
10	Body (with plug)	7H1790	AE9	1	1						
11	Cover	17H1712	AE10	1	1						
12	Screw for cover (short)	HZS0408	AE11	1	1						
13	Screw for cover (long)	HZS0414	AE12	1	1						
14	Washer for screw (spring)	LWN204	AE13	2	2						
15	Dowel	7H1793	AE14	2	2						
16	Shaft with rotors—driving	7H1792	AE15	1	1						
17	Joint—pump to crankcase	11G10	AE16	1	1	12					
18	Washer for spindle (thrust)	AEH460	AE17	1	1						
19	Strainer assembly—oil	1H1192	AE18	1	1						
20	Joint—strainer to pump	1H1198	AE19	1	1						
21	Screw—strainer to pump	HNS0406	AE20	3	3			HNS0407	Com. (E) 499		Always use HNS0407 prior to (E) 499
22	Washer for screw (spring)	LWN304	AE21	3	3						
23	Valve—oil release	1G1452	AE22	1	1						
24	Spring for valve	1H756	AE23	1	1						
25	Cap nut for valve	1A2206	AE24	1	1						
26	Washer for cap nut	2K4982	AE25	2	2						
27	Pipe—oil feed (crankcase to cylinder head)	AEH310	AE26	1	1						
28	Banjo bolt for pipe (crankcase end)	AEH313	AE27	1	1						
29	Banjo bolt for pipe (cylinder head end)	AEH602	AE28	1	1						
30	Washer for banjo bolt	6K500	AE29	4	4						
	OIL FILTER (EXTERNAL)										
31	Filter—oil	1H1067		1	1						
32	Body assembly	1H1069	AE30	1	1						
33	Washer—sealing (bottom)	7H1948	AE31	1	1						
34	Bolt—centre	7H1965	AE32	1	1						
35	Spring	7H1764	AE33	1	1						
36	Washer (steel)	7H1969	AE34	1	1						
37	Washer (felt)	7H1968	AE35	1	1						

SERVICE PARTS LIST

THE M.G. Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	Oil Filter (External)—continued										
1	Plate—pressure	17H846	AE36	1	1						
2	Circlip	7H1952	AE37	1	1						
3	Element	8G683	AE38	1	1						
4	Seal—body to head	8G619	AE39	1	1	12					
5	Seal—head to crankcase	8G619	AE40	1	1	12					
6	Head assembly	1H1068	AE41	1	1						
7	Adaptor—oil filter connection	1H922	AE42	1	1						
8	Joint for adaptor (copper)	6K501	AE43	1	1						
9	Pipe assembly—filter to crankcase	AEH598	AE44	1	1						
10	Screw—pipe banjo union to crankcase	1K2142	AE45	1	1						
11	Washer for screw—outer (copper)	1H898	AE46	1	1						
12	Washer for screw—inner (copper)	6K501	AE47	1	1						