



SERVICE PARTS LIST

THE M.G. Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
<b>DISTRIBUTOR AND DYNAMO MOUNTINGS</b>											
1	Housing—distributor	AEH496	AH1	1	1						
2	Bush for housing	AEH531	AH2	2	2						
3	Joint for housing	AEH502	AH3	1	1						
4	Shaft and dog assembly—distributor drive	AEH45	AH4	1	1						
5	Pin for dog (taper)	TPS0508	AH5	1	1						
6	Gear—distributor drive	AEH500	AH6	1	1						
7	Pin for gear (taper)	TPS0507	AH7	1	1						
8	Housing—tachometer drive	AEH455	AH8	1	1						
9	Joint for housing	1G2401	AH9	1	1						
10	Screw—distributor locating	ZCS0404	AH10	1	1						
11	Washer for screw	2K6337	AH11	1	1						
12	Pinion—tachometer drive	AEH458	AH12	1	1						
13	Oil seal for pinion	1G2398	AH13	1	1						
14	Ring—seal retaining	1G2399	AH14	1	1						
15	Bolt—dynamo to water pump and inlet manifold	HBZ0514	AH15	2	2						
16	Shim—dynamo to inlet manifold (.003")	AEH622	AH16	A/R	A/R						
17	Washer—distance—dynamo to inlet manifold	AEH530	AH17	A/R	A/R						Alternative to avoid using excessive quantity of shim AEH622
18	Washer for bolt (plain)	PWZ105	AH18	4	4						
19	Nut for bolt	LNZ205	AH19	2	2						
20	Link—dynamo adjusting	AEH503	AH20	1	1			AEH614	Com. (E) 448		Always supply AEH614 prior to (E) 448
21	Screw—link to water inlet pipe	ZCS0507	AH21	1	1						
22	Washer for screw (plain)	PWZ105	AH22	1	1						
23	Washer for screw (spring)	LWZ205	AH23	1	1	24					
24	Screw—link to dynamo	3H2098		1	1						
25	Washer for screw (spring)	2K5319		1	1						
26	Set screw—link to dynamo		AH24	1	1			ZCS0509			
27	Washer for set screw		AH25	1	1			2A110			
28	Washer for set screw		AH26	1	1			PWZ205			
29	Nut for set screw		AH27	1	1			51K1712			
30	Pulley for dynamo	AEH504	AH28	1	1			AEH605	Com. (E) 272		Always supply AEH605 with 1 off fan belt AEH621 prior to (E) 272
31	Fan for dynamo	1G1783	AH29	1	1						