



A2914

SERVICE PARTS LIST

THE M.G. Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	FUEL SYSTEM										
	FUEL PUMP										
1	Pump assembly	AUA73		1	1						
2	Body	AUA4644	D1	1	1						
3	Union—inlet and outlet	AUC1833	D2	2	2						
4	Washer—union to body	AUC2141	D3	4	4						
5	Bolt—union	AUC2698	D51	2	2						
6	Cage—valve	AUA4607	D4	1	1						
7	Disc—valve	AUA4611	D5	2	2						
8	Clip for valve cage	AUA4609	D6	1	1						
9	Filter	AUA4647	D7	1	1						
10	Lid (top and bottom)	AUA4645	D8	2	2						
11	Washer for lid	AUA4646	D9	2	2						
12	Screw for lid	AUA4083	D10	12	12						
13	Washer for screw	AUA4643	D11	12	12						
14	Diaphragm assembly	AUA6013	D12	1	1						
15	Roller	AUA1433	D13	11	11						
16	Spring	AUA1785	D14	1	1						
17	Coil housing	AUA6003	D15	1	1						
18	Tag—5 B.A. terminal	AUA1455	D16	1	1						
19	Tag—2 B.A. terminal	AUA1456	D17	1	1						
20	Screw—earth	AUA4850	D18	1	1						
21	Washer for earth screw (spring)	AUA1863	D19	1	1						
22	Screw—housing to body	AUA1453	D20	6	6						
23	Rocker and blade	AUA6021	D21	1	1						
24	Blade	AUA6036	D22	1	1						
25	Tag—2 B.A. terminal	AUA1456	D23	1	1						
26	Screw for blade	AUA565	D24	1	1						
27	Washer for screw (spring)	AUA566	D25	1	1						
28	Spindle for contact breaker	AUA1435	D26	1	1						
29	Pedestal	AUA6034	D27	1	1						
30	Screw—pedestal to housing	AUA1459	D28	2	2						
31	Washer for screw (spring)	AUA1863	D29	2	2						
32	Screw for terminal	AUA1468	D30	1	1						
33	Washer for screw (spring)	AUA1863	D31	1	1						
34	Washer for screw (lead)	AUA1662	D32	1	1						
35	Nut for screw	AUA1661	D33	1	1						
36	Cover—end	AUA1466	D34	1	1						
37	Nut for cover	AUA878	D35	1	1						
38	Knob—terminal	AUA869	D36	1	1						