



A2970

SERVICE PARTS LIST

THE M.G. Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>BRAKE CONTROLS</b>										
1	Pedal—brake	AHH5693	M1	1							
2	Pedal—brake	AHH5695			1						
3	Bush	185794	M2	1	1						
4	Pad—pedal (rubber)	AHH5100	M3	1	1						
5	Distance piece—pedal	185795	M4	2	2						
6	Distance washer—pedal	AHH5728	M5	1	1						
7	Bolt—pedal to bracket	HBZ0628	M6	1	1						
8	Nut for bolt	FNZ106	M7	1	1						
9	Washer for nut (spring)	LWZ206	M8	1	1						
10	Distance tube—pedal stop	AHH5692	M9	1	1						
11	Rod—distance tube	AHH5752	M10	1	1						
12	Nut for rod	FNZ104	M11	2	2						
13	Washer for nut (spring)	LWZ204	M12	2	2	12					
14	Clevis pin—brake pedal	CLZ0515	M13	1	1						
15	Washer for pin (plain)	PWZ105	M14	1	1						
16	Spring—pedal pull-off	130154	M15	1	1	6					
17	Fume excluder—pedal	AHH5689	M16	1	1						
18	Cover-plate—fume excluder	AHH5688	M17	1	1						
19	Base plate assembly—box	AHH5687	M18	1	1						
20	Screw—plate to cross-bar	HPZ0506	M19	2	2						
21	Washer for screw (spring)	LWZ205	M20	2	2	24					
22	Screw—cover-plate to base plate	HZS0506	M21	2	2						
23	Nut for screw	FNZ105	M22	2	2						
24	Washer for nut (spring)	LWZ205	M23	2	2	24					
25	Support bracket—R.H.	AHH5691	M24	1	1						
26	Support bracket—L.H.	AHH5690	M25	1	1						
27	Screw—bracket to tapping plate	HZS0505	M26	4	4						
28	Washer for screw (spring)	LWZ205	M27	4	4	24					
29	<b>Box—master cylinder</b>	<b>AHH5684</b>	<b>M28</b>	<b>1</b>	<b>1</b>		<b>AHH5877</b>	<b>Com. (C) 997</b>			
30	Screw—box to bulkhead	HZS0506	M29	2	2						
31	Nut for screw	FNZ105	M30	2	2						
32	Washer for nut (plain)	PWZ205	M31	2	2						
33	Washer for nut (spring)	LWZ205	M32	2	2	24					
34	Screw—box to bracket	HZS0506	M33	6	6						
35	Nut for screw	FNZ105	M34	6	6						
36	Washer for nut (spring)	LWZ205	M35	6	6	24					
37	Reinforcement piece—box	AHH5685	M36	1	1		AHH5876	Com. (C) 997			
38	Blanking plate	AHH5753	M37	1	1						
39	Seal—blanking plate (rubber)	AHH5754	M38	1	1						
40	Screw fixing blanking plate	HPZ0508	M39	2	2						
41	Screw fixing blanking plate	HZS0506	M40	2	2						
42	Nut for screw	FNZ105	M41	2	2						
43	Washer for screw (spring)	LWZ205	M42	4	4	24					