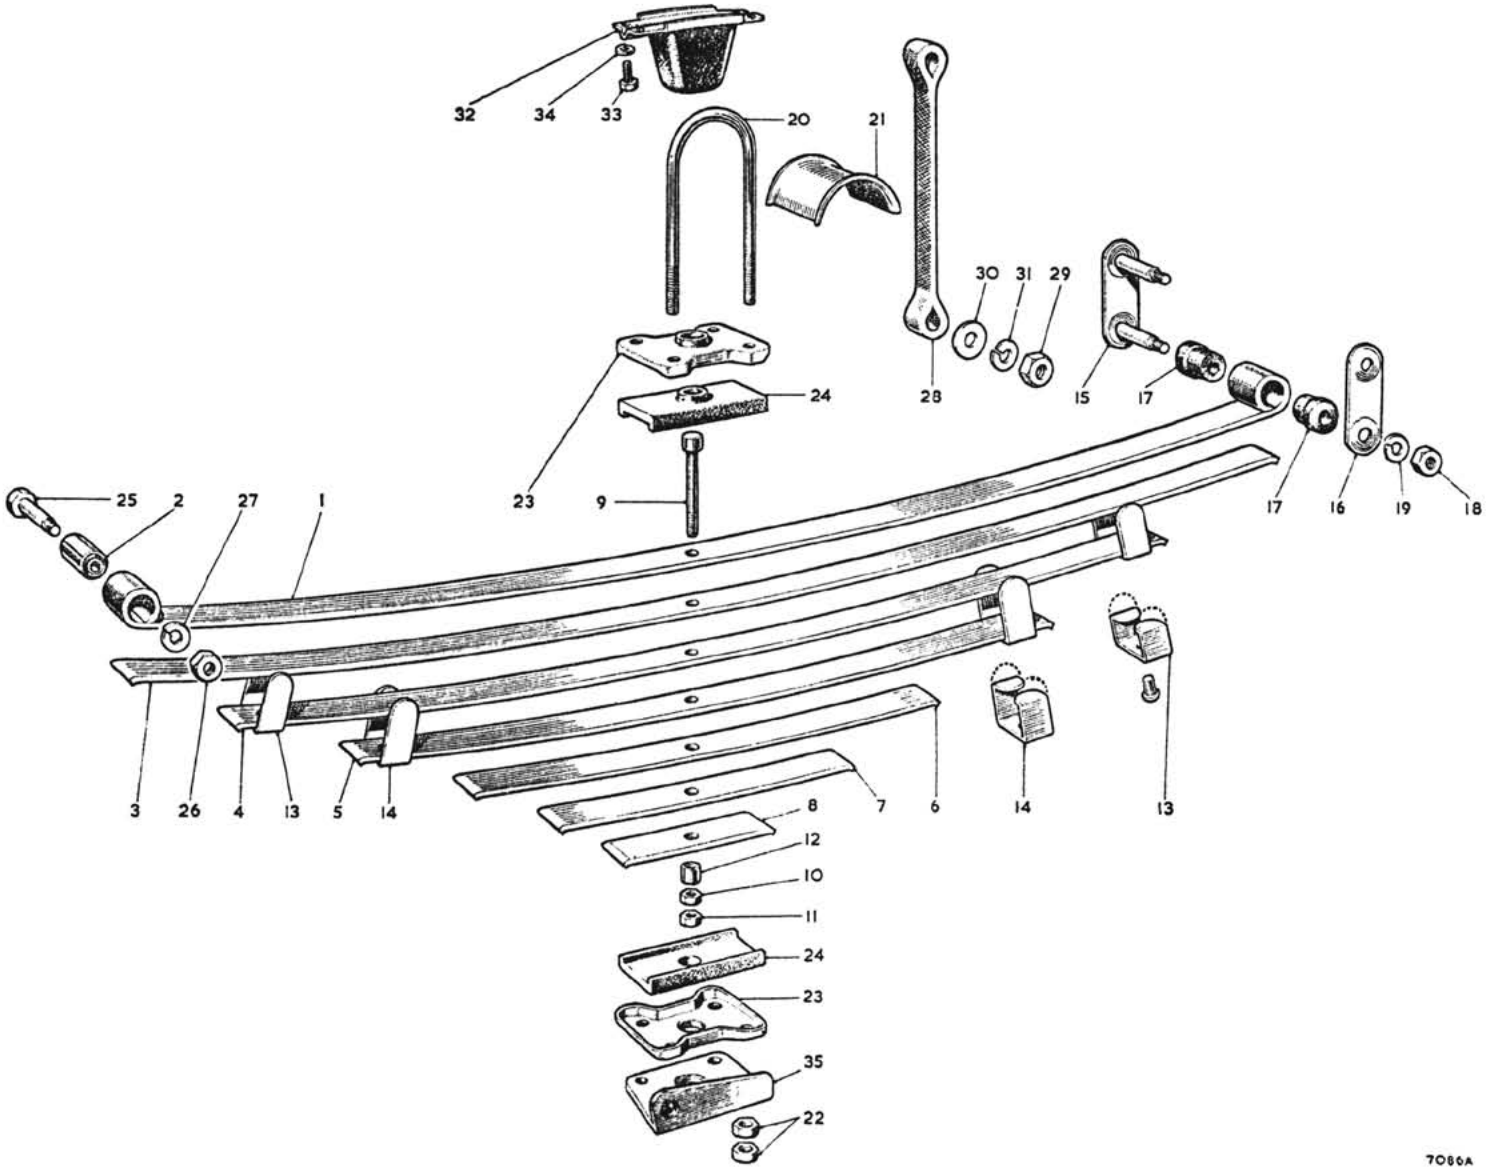

To face page H.5

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS Amdt. No.	REMARKS
	REAR SPRING										
1	**Spring assembly (rear)**	**AHH5461**		2	2						
2	Leaf—main	AHH5462	HB1	2	2						
3	Bush	AHH5015	HB2	2	2						
4	Leaf—2nd	AHH5464	HB3	2	2						
5	Leaf—3rd	N.S.P.	HB4	2	2						
6	Leaf—4th	N.S.P.	HB5	2	2						
7	Leaf—5th	N.S.P.	HB6	2	2						
8	Leaf—6th	N.S.P.	HB7	2	2						
9	Bottom plate	N.S.P.	HB8	2	2						
10	Bolt—locating	AHH5042	HB9	2	2						
11	Nut for locating bolt	FNZ105	HB10	2	2						
12	Locknut for locating bolt	FNZ205	HB11	2	2						
13	Distance piece for locating bolt	ACA5000	HB12	2	2						
14	Clip—3rd leaf	AHH5467	HB13	4	4						
15	Clip—4th leaf	AHH5470	HB14	4	4						
16	Shackle plate and pins	AHH5018	HB15	2	2						
17	Shackle plate (inner)	AHH5019	HB16	2	2						
18	Bush—shackle plate (rubber)	AHH5016	HB17	8	8						
19	Nut for shackle plate	FNZ106	HB18	4	4						
20	Washer for nut (spring)	LWZ206	HB19	4	4						
21	'U' clip—rear spring	184448	HB20	4	4						
22	Plate—top 'U' clip	AHH5082	HB21	2	2						
23	Nut for 'U' clip	FNZ106	HB22	16	16						
24	Plate—spring locating	ACG5001	HB23	4	4						
25	Pad—spring seating	ACG5002	HB24	4	4						
26	Bolt—spring front end	AHH5071	HB25	2	2						
27	Nut for front end bolt	FNZ107	HB26	2	2						
28	Washer for front end bolt (spring)	LWZ207	HB27	2	2						
29	Rebound strap	AHH5081	HB28	2	2						
30	Nut—rebound strap to axle	FNZ106	HB29	2	2						
31	Washer for nut (plain)	PWZ206	HB30	2	2						
32	Washer for nut (spring)	LWZ206	HB31	2	2						
33	Bump rubber	AHH5106	HB32	2	2						
34	Screw—bump rubber to frame	HZS0505	HB33	4	4						
35	Washer for bump rubber screw (spring)	LWZ205	HB34	4	4	24					
36	Bracket—shock absorber arm to rear spring—R.H.	AHH5067		1	1						
37	Bracket—shock absorber arm to rear spring—L.H.	AHH5068	HB35	1	1						